

1. Use the M5\*10 screws to  
fix the top&bottom to  
the main frames


2. Use the M4\*8 self tapping  
screws to reinforce the front  
of top&bottom to frames

3. Use the M4\*8 self tapping  
screws to fix the decorating  
plate on the top&bottom

4. Use the M6\*12 screws and  
M6 cage nuts to combine the  
19" profiles to the main  
frames

5. Use the M4\*8 self tapping  
screws to install the rear  
panel

6. Set up the front door and  
side panels

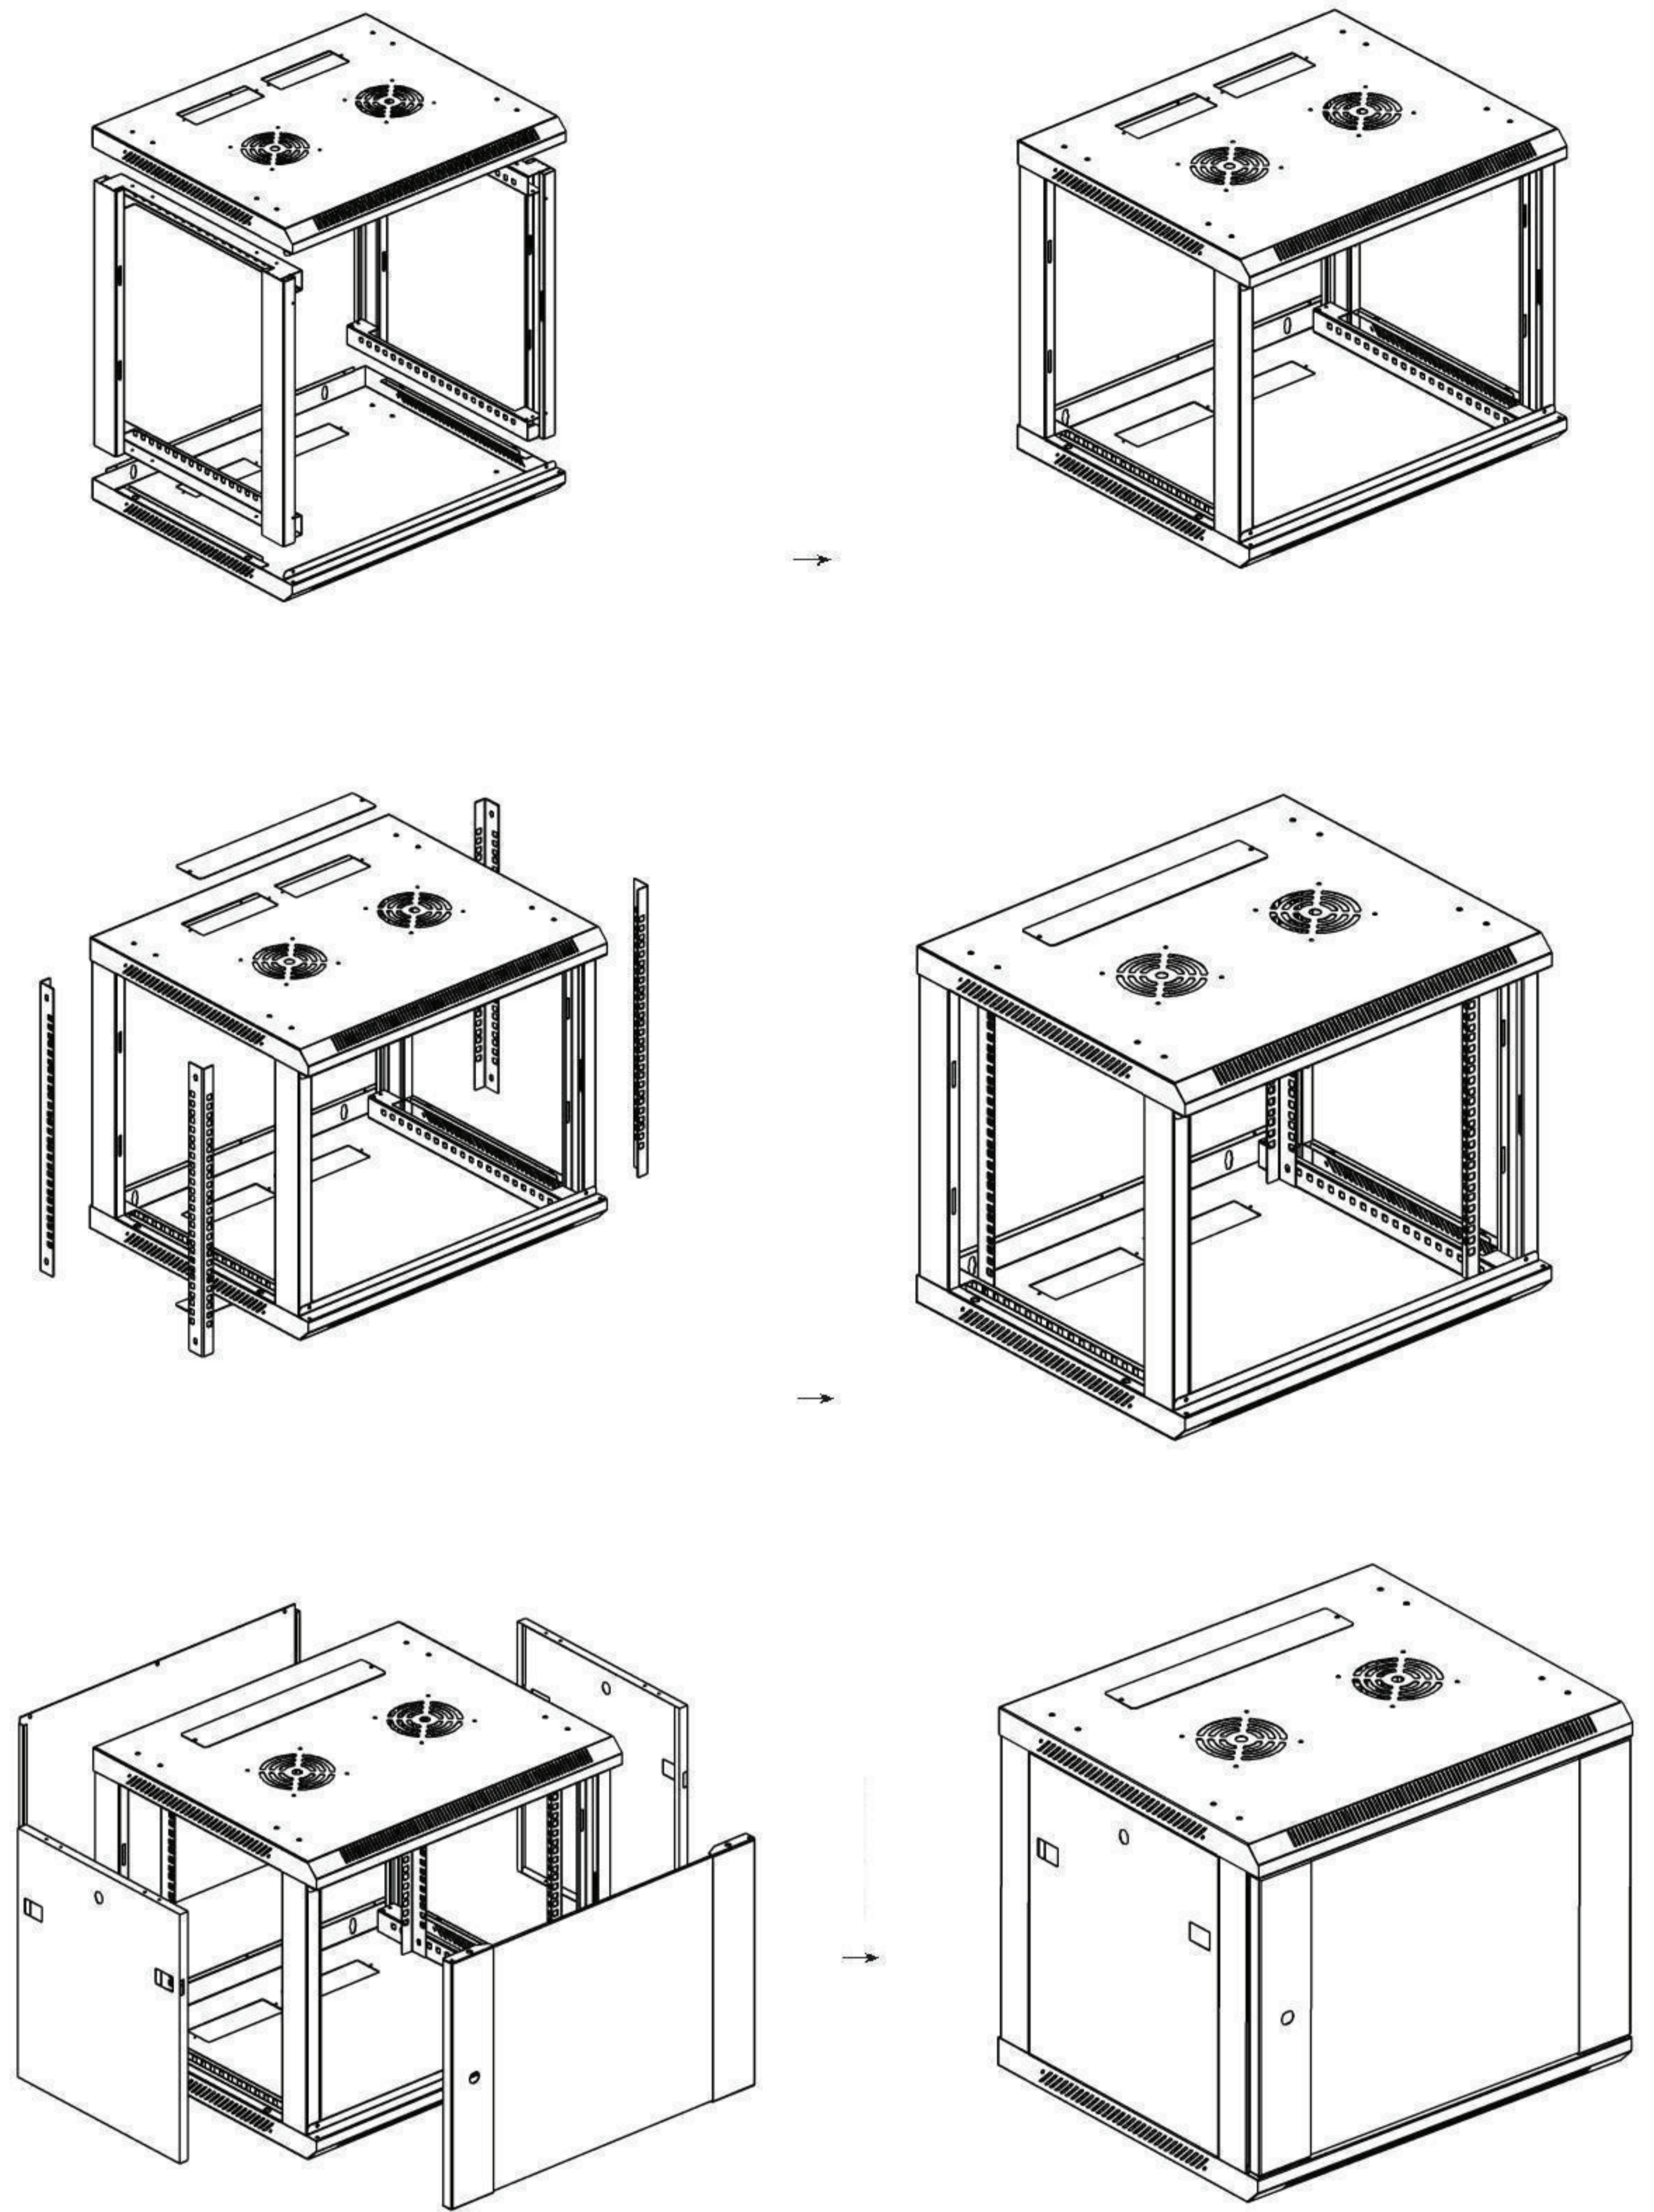

## PACKING LIST FOR ASSEMBLY

DESCRIPTION	QTY(PCS)	CONFIRM
Top	1	
Bottom	1	
Main frame	2	
19" profiles	4	
Decoating Plate	2	
Side panel	2	
Front door	1	
Rear cover	1	
Rear mounting panel	0	
M8*12 nuts	0	
M8*12 bolts	0	
M6*12 cage nuts	8	
M6*12 Screw	8	
M4*8 self tapping	16	
M5*8 self tapping	0	
M5*10 Screw	16	
Side panel lock	0	

## ACCESSORIES BAG

